

HOME



ECONOMY

**HEATER
CONTROLLER**

—

VERTICAL




INSTALLATION MANUAL & USER MANUAL


HEATER CONTROLLER H+E



SAFETY:

1. **The heater should be installed by a qualified person.**
2. Bathroom radiators fitted with electric heaters should be fixed not less than 60 cm from a bath, shower or wash basin, and never above a bath.
3. For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
5. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. **The heater MUST BE DISCONNECTED before cleaning the casing. AVOID SOAKING THE CASING.**
7. One radiator valve must always be open when a heater is in use (liquid thermal expansion).

CAUTION: To avoid the risk of fire or electric shock the heater should be protected from water spray or flooding. This appliance is not intended for use by persons (including children) of limited physical, sensory or mental abilities, or persons inexperienced or not familiar with the appliance, unless supervised or instructed on the appliance use by persons responsible for their safety. Particular attention should be paid to children, to preclude playing with the appliance by them. Exclamation mark on triangular field signals:  **information important for the user.**

CAUTION: electric shock hazard!, lightning mark ended with arrow on triangular field 

CAUTION: in order to reduce electric shock hazard, do not remove the casing (nor its rear cover). There are no user-serviceable parts inside the appliance; the product must be returned to the manufacturer for repair via the distributor who sold the product.

GUARANTEE TERMS:

Guarantee is granted by manufacturer for 24 months period starting from date of sale, but no longer than 36 months from date of the heater manufacture. Defects revealed within this period, resulting from a fault of manufacturer will be repaired free of charge or the item replaced with new, equivalent one. Term of complaints' investigation up to 14 (fourteen) days from date of submission to the manufacturer.

Guarantee does not cover:

1. Using of product in a manner noncompliant with attached instructions.
2. Any visible damage to the heating element or controller due to improper use. Damaging of manufacturer's seals makes the guarantee null and void.

In the event that Heatpol are unable to repair or replace this product we reserve the right to refund the purchase price as an alternative.

GUARANTEE CARD

Serial No.:

Date of sale:

Stamp of retail outlet, signature of seller



Mników 322, 32-084 Morawica, Poland
Tel/fax: +48 12 656 44 91

MADE IN EU

Caution: The guarantee card should be legibly filled in retail outlet. Any corrections on the guarantee card will invalidate the guarantee. Guarantee card valid only with proof of purchase.

USER MANUAL: Heating element + Heater controller (vertical) H+E

Kit content



(A)
Heating element




(B)
Heater controller



(F)
Allen key

Purchase option

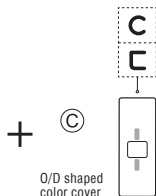


(C)
O/D shaped
color cover




(D) (E)
Wall mount
plastic cover


Mounting in radiators

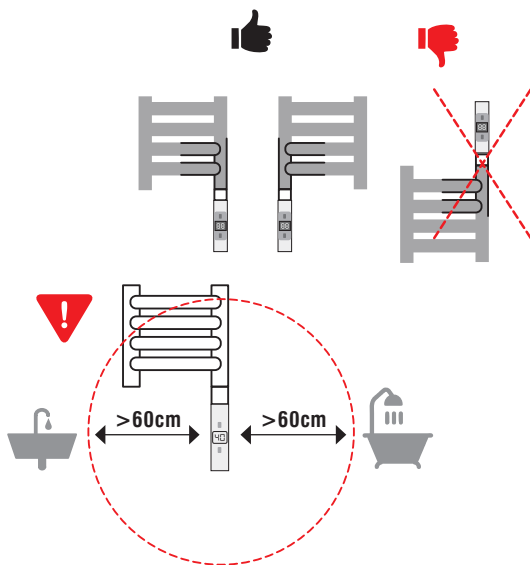


Installation options: central heating system

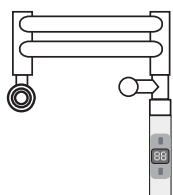


T-piece installed with
locshield valve

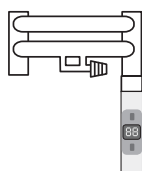


central connection

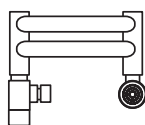




T-piece connection
with locshield valve

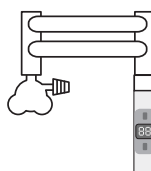


one-pipe valve
connection

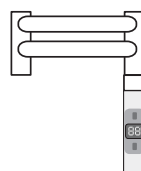


Installation options: electric radiator

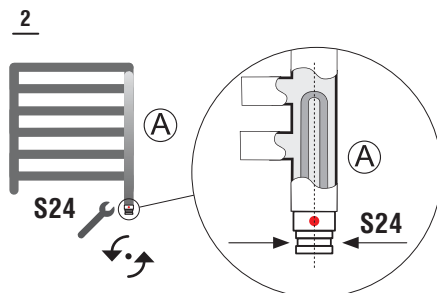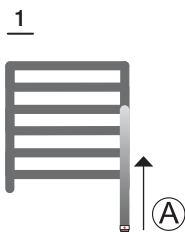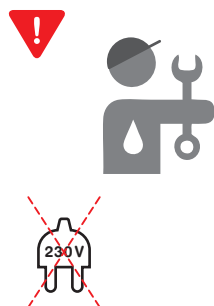




3

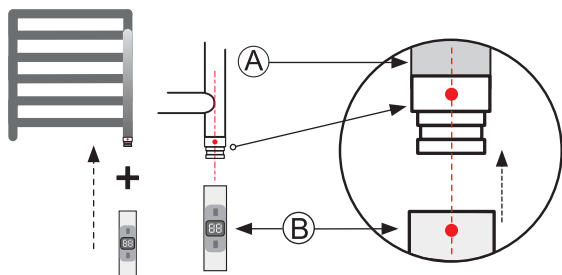


4

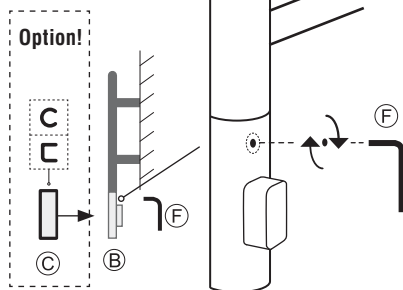

Electric radiators

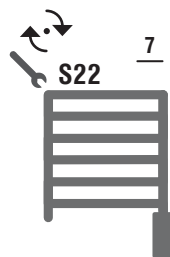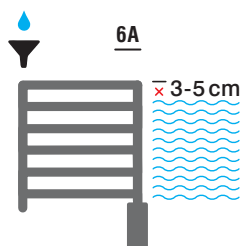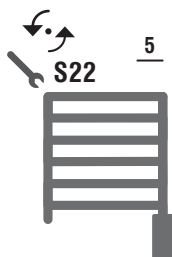


CH system

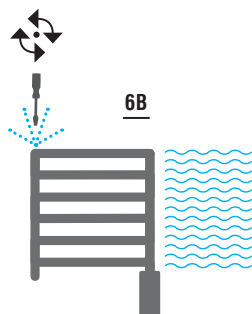

Finishing

Purchase option!

Element (D) must be cut the correct length


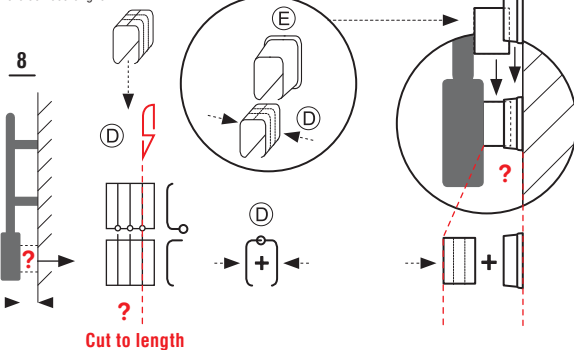


Cut to length



9A Connection with a coiled cable and a plug

9A Hard wire connection

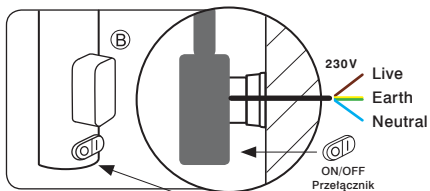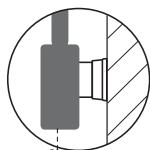

Option!

10 After electric connection, turn on the switch (concern only hard wire connection)

For the heater permanently connected (hard wire) there must be applied a cut-off device from the mains. Such a device must disconnect the heater from the supply mains in 2 poles, with contact separation of at least 3 mm

1



40°C

Standard heating temperature

10°C - 65°C

Select temperature

2

TURBO mode activation



TURBO mode activation –
max heating temperature
Hold button for 3 seconds



b1-b2-b3

Max heating temperature
Selection for 1/2/3 hours

b0 Off selection

3

TIMER mode activation



t1

1. Select temperature

2. Hold button “-” for 2 seconds
“t1” symbol will appear on the display

3. Using +/- buttons set the desired number of heater work hours (**1-9**)

After the programmed time expires, the heater will turn off

DO NOT DISCONNECT!

controller from heating element, when connected to the power supply





Run the controller

Hold upper button
for 3 seconds

Switch off the controller

Hold lower button
for 5 seconds

ERRORS

- E1 Lack of water (or wrong choice of heating element to the heater)
- E2 Damaged heating element



Mników 322, 32-084 Morawica, Polska
Tel/fax: +48 12 656 44 91

www.heatpol.pl
www.homeplus-system.com

MADE IN EU